


Using the Remote

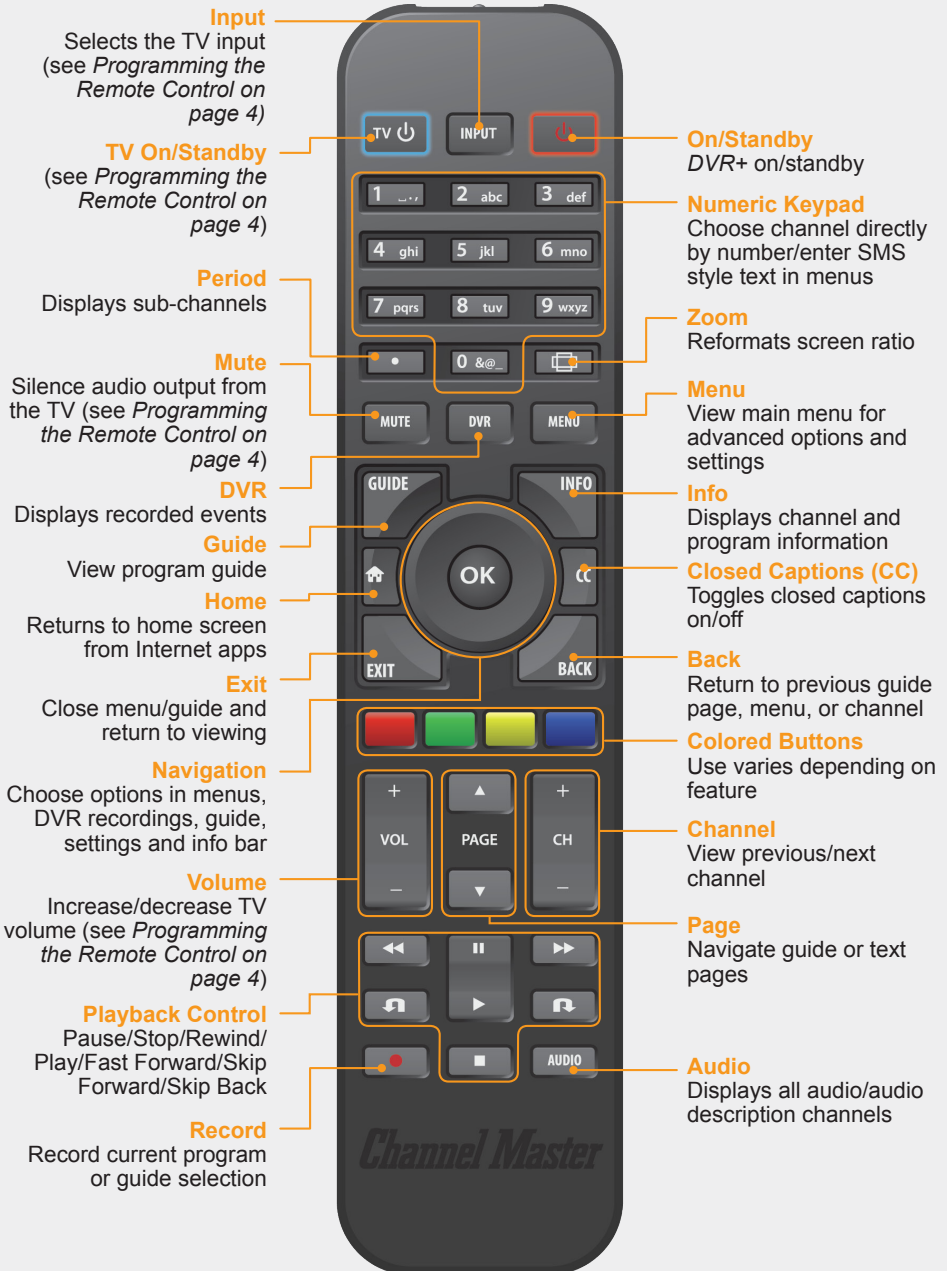

Watching TV

Mute/unmute
(see *Programming the Remote Control* on page 4)



View program/
channel
information



Increase/decrease
sound volume
(see *Programming the Remote Control* on page 4)



Rewind



Skip backward



Record current
program or
selected program
or series



Change channel



Pause a
program



Play a program



Fast forward



Skip forward



Stop

To move through the
program guide, use the
following buttons:



-2.5 hours



Search



-1 day



+1 day



Record selected programs
or series



Next page of channels

PAGE



Previous page of channels

Programming the Remote Control

The remote is capable of controlling basic functions of most TVs (volume, mute, power, input). To program the remote control to operate your TV, you may use the *Easy Scan* method or the *Code Entry* method.

Easy Scan

1



Turn your TV on.

2



Point the remote at the TV.
Hold down both **CH+** and **VOL-** on the remote simultaneously for at least two seconds. The TV button LED gives two slow flashes to indicate successful entry into setup mode.

3



Press **INPUT**. The TV button LED comes on.

4



Press **TV POWER** repeatedly until the TV switches off.

5



Press **INPUT**. The TV button LED gives two slow flashes to indicate that the code has been stored successfully.

Programming the Remote Control, continued

Code Entry

To program the remote with a 4-digit code, use the steps below.

Note: Where several codes are listed for a manufacturer, it may be necessary to repeat the sequence below with each code until the correct one is found.

1



Hold down both the **CH+** and **VOL-** keys simultaneously for at least 2 seconds. The TV button LED gives two slow flashes to indicate successful entry into the setup mode.

2



Using the numbered key (keypad), enter the 4-digit code within 30 seconds. The TV button LED flashes for each entry.

Note: Remote codes for some of the popular TVs are provided below; for a complete list, see the *Channel Master DVR+ User Guide* found at ChannelMaster.com/Support.

Remote Code: _____

3



After the fourth digit entry, the TV button LED gives two slow flashes to indicate that the code has been successfully programmed.

In the event of an error, the TV button LED gives four rapid flashes. If this occurs, you need to begin this process again.

Remote Codes

Hitachi 0001 0841 0931 1041
1221 1271 1341 1371 1481 1661
1721 1751 1801 1911 1981 2051
3341 3621 4121 4331 4731
Insignia 0371 0581 0701 0871
0921 1241 1381 2241 2271 2891
2921 3761 3841 4371 4721 4761
5051 5061 5181
JVC 0311 0481 0771 0901 0941
1281 1481 1801 1911 2381 2751
4121 4201 5071 5281
LG 0001 0131 0251 0611 0761
0931 1181 1221 1471 1501 1911
3001 3021 3091 3221 3281 3311
3811 4731 5271 5501 5511
Magnavox 0001 0321 0681 0701
0961 1021 1171 1221 1801 1961
2321 4191 4641 4761 4791 4991
Panasonic 0051 0201 0951
1091 1491 1571 1651 1831 1881
1961 2151 2711 2801 3381 3401
3431 3551 3771 4691 4781 4861
5201 5481

Philips 0001 0161 0181 0321
0421 0541 0661 0701 0791 0911
0961 1021 1151 1171 1381 1391
1601 1741 1801 1961 2151 2321
3031 3131 3151 3171 3371 3391
3431 3541 3591 3861 3911 3971
3981 4191 4761 4791
RCA 0001 0051 0091 0141 0251
0261 0361 0551 0811 0891 1001
1131 1221 1331 1371 1421 1521
1691 1851 1921 2011 2061 2111
2151 2251 2301 2851 2951 3421
3431 3571 4011 4921
Samsung 0001 0101 0251 0261
0331 0351 0531 0571 0711 0781
1191 1221 1311 1501 1911 2071
2141 2721 2741 2961 3301 3321
3471 3561 4011 4941 4961 5471
5521
Sharp 0001 0341 0461 0681
0691 1221 1291 1441 2031 2201
2261 2731 3181 3191 3201 3461
4751 4991 5421

Sony 1071 1641 1731 1901
2161 2741 3531 3891 4101
4981 5321
Toshiba 0211 0231 0341 0351
0821 1121 1191 1261 1311
1351 1541 1571 1621 1801
1841 1911 2691 3211 3551
4891 4941 5081 5531
Vizio 1471 1741 2021 2901
3651 3741 3851 4081 5561
5571 5581 5591 5601 5611
5621 5631 5641 5651 5661
5671 5681 5691 5701 5711
Zenith 0001 0061 0131 0371
0681 0691 0931 0941 0991
1011 1031 1081 1171 1181
1191 1221 1251 1271 1471
1631 1661 1751 1771 1781
1791 2171 2291 3501 4201
4321 4731 4751 4791 4941
4991 5211 5271 5281