

# Channel Master

## Power Adapter with Integrated Power Inserter Instruction Sheet



**CM-3400XPIPS**

### Installation:

1. Locate the output port on your Distribution Amplifier marked with both "PWR IN" and "RF OUT". Note the correct optional power port(s) for Channel Master Distribution Amps (CM-3410, 3412, 3414 and 3418) are circled in Fig A. You will not use the "PWR IN" ports marked with an "X" in Fig A
2. Using coaxial cable connect the power supply's output marked "To AMP ▼" and the amplifiers optional power port marked "PWR IN"/"RF OUT". (See Fig A and Fig B)
3. Using a separate coaxial cable connect the power supply's output port marked "TO TV ▼" to your TV or Set Top Boxes "Antenna" or "RF" input. (See Fig B and Fig C)

4. Plug your Adapter into an AC voltage source.

Installation is now complete.

Perform a RESCAN for channels on all active outputs connecting to TVs or Set Top Boxes.

(The Adapter is compatible with these Channel Master Amplifier Models: CM-3410, CM-3412, CM-3414, CM-3418, CM-7777v3, CM-7778v3 and CM-7778HD.)

**Figure A**


\* OPTIONAL POWER PORTS CIRCLED ARE MARKED "PWR IN" / "RF OUT"



**Figure B**



**Figure C**

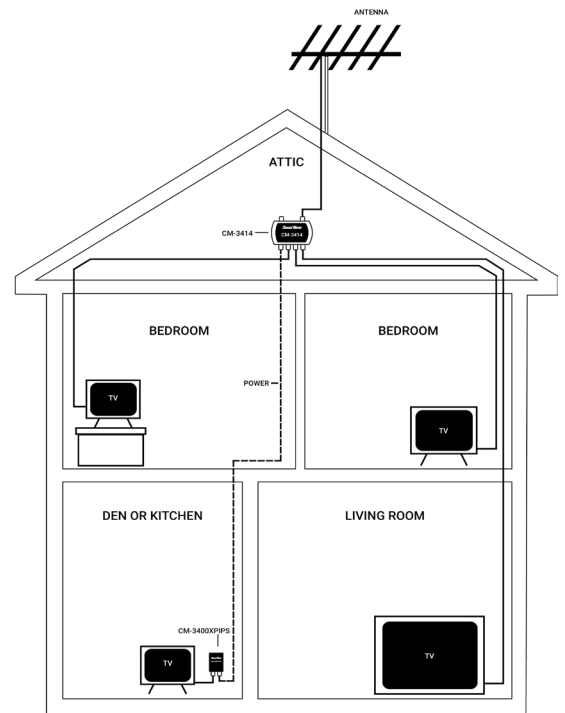

For Product Warranty information please visit us online at [www.channelmaster.com/warranty](http://www.channelmaster.com/warranty)